



5.6 How do I set up the power limit of a plant?

1. Go to "Plants" and find the plant that you want to update. Click the "Power Limit Settings (Active Power Control)" button on the right side of the Plant O&M. (Note: this function is for DTU-PRO users only.)

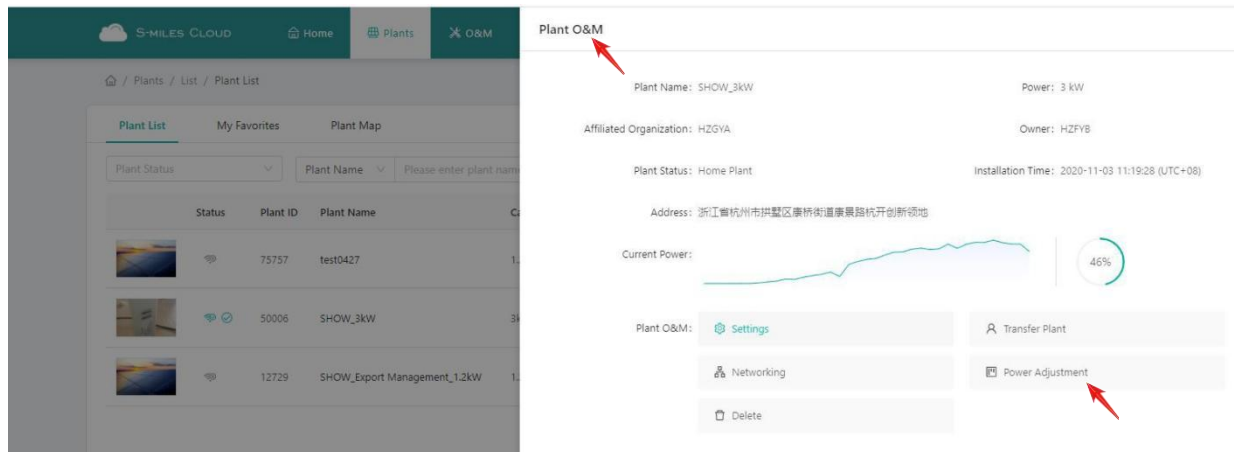

2. Input the output power limit you want to set, then click the "Issue Command" button and wait for around 5 minutes.

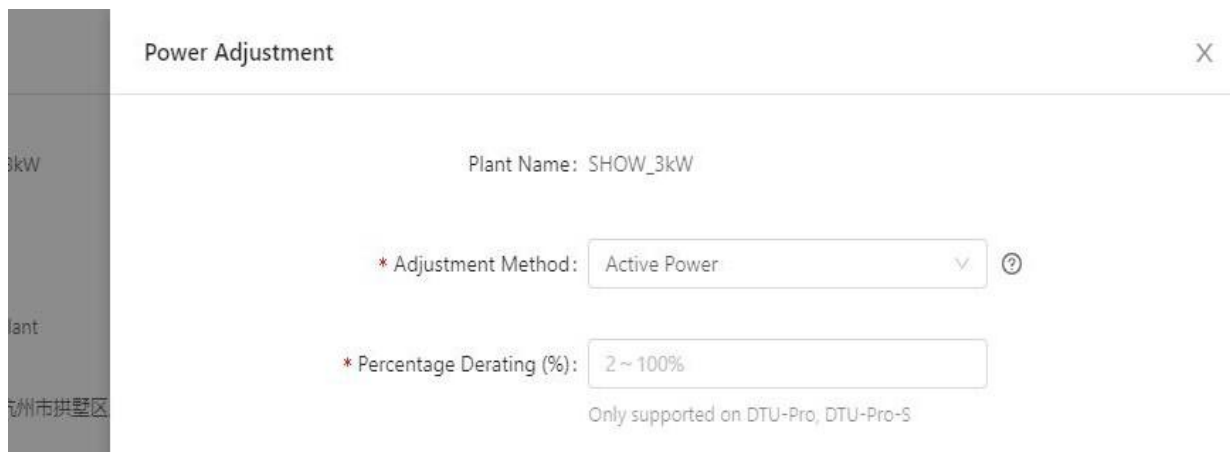

For 2nd Gen microinverters, the setting range is from 10% to 100%.

For 3rd Gen microinverters, the setting range is from 2% to 100%.